



**READ INSTRUCTIONS IN FULL  
BEFORE INSTALLATION.  
QUESTIONS? Call 916-631-8071**

MetalCloak YJ Low Profile LED Marker Light Instructions

Rev. B

Page 1 of 5

Assembly Step

Detailed Instructions

Picture/Illustration

**At MetalCloak we work hard to ensure every step of the MetalCloak experience is an incredible one. Part of that experience is the ease of installation of our products.**

**While we design and plan for most contingencies, installation may be different based on different configurations and years.**

**We ask that you provide feedback and pictures if you find any part of our instructions that do not match your particular Jeep. And if you have any difficulties at all, please feel free to give us a call. Our instructions can only be as good as the feedback we receive from our growing customer base.**

**Thank you and enjoy your MetalCloak Products!**

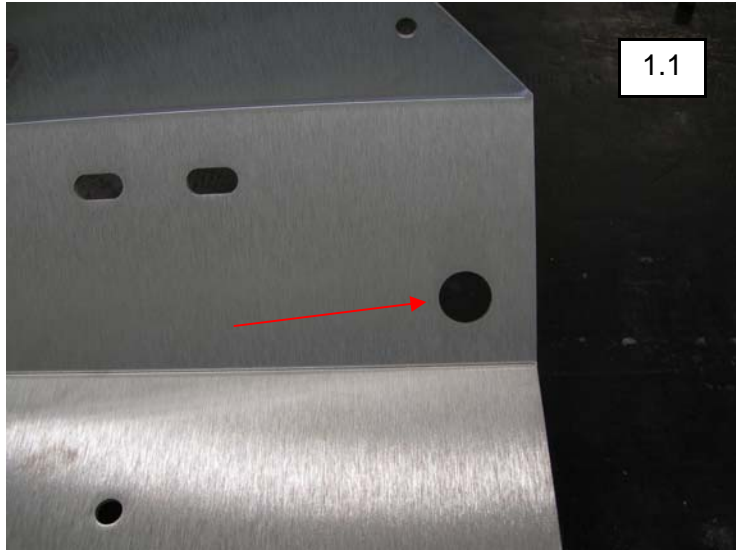

**IMPORTANT NOTE: The tube of Silver Anti-seize provided should be used on all bolts—only a small amount is needed.**

This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED and/or MAINTAINED. THE USER ASSUMES ALL RISK.

By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these MetalCloak products from Armored Works, LLC, its affiliates and distributors and agents as is and with all faults.

The entire risk as to the quality and performance of these MetalCloak products is with the purchaser. Working on your vehicle can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or safety critical work to a skilled mechanic.

We take no responsibility for the incorrect user and/or installation of MetalCloak products.

Assembly Step	Detailed Instructions	Picture/Illustration
<p>1. Drill hole 3/4" dia.</p> <p><b>Tools/Parts</b></p> <ul style="list-style-type: none"><li>• Front Fender</li><li>• 3/4" Drill Bit</li><li>• Drill</li></ul>	<p>a. Drill a 3/4 dia. hole 1" from front of aluminum inner fender and 1" from bent edge. (See Pic 1.1)</p> <p>b. Note: For systems shipped after 10/1/09, hole is already there.</p>	
<p>2. Install Lights</p> <p><b>Tools/Parts</b></p> <ul style="list-style-type: none"><li>• Marker Lights</li></ul>	<p>a. Install lights. (See Pic 2.1)</p> <p>b. Remove rubber grommet from marker light.</p> <p>c. First insert rubber grommet into hole, then insert marker light inside grommet.</p>	

## Assembly Step

## Detailed Instructions

## Picture/Illustration

## 3. Cut side lights

**Tools/Parts**

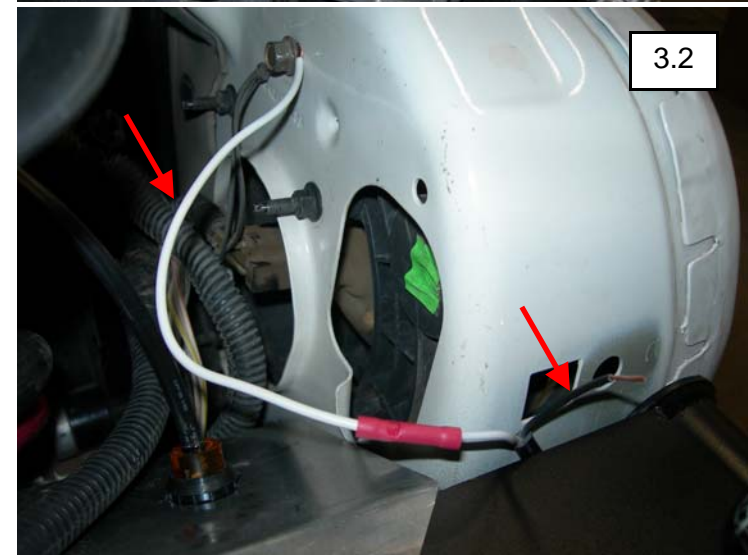
- Wire Cutters
- Wire butt splice

## a. Cut the side marker light wires. (See Pic 3.1)



## b. Wire the new marker lights per wiring plan.

Wiring Plan (See Pic 3.2)

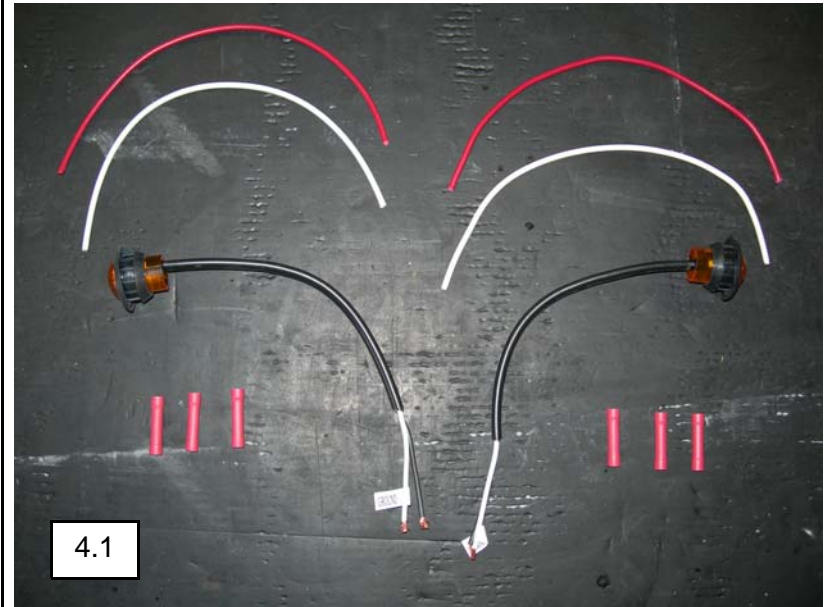
c. Ground to White  
White (Jeep running) to Black (inside)

## Assembly Step

## Detailed Instructions

## Picture/Illustration

- Marker Light Kit (See Pic 4.1)



Assembly Step	Detailed Instructions	Picture/Illustration
---------------	-----------------------	----------------------

